

Epson TM-T20II Receipt Printer Notes

PetExec is compatible with some receipt printers but we are only recommending the Epson **TM-T20II** printer, as it is a recommended printer for First Data.


General Installation

Mac users: Download the latest driver if the included driver does not operate on updated versions of the MacOS.

Click [here](#) or copy/paste the link into your browser:

https://epson.com/Support/Point-of-Sale/Receipt-Printers/Epson-TM-T20II/s/SPT_C31CD52062

Once the print driver is installed, we recommend you set the Margins to “Minimum” Layout to Portrait so the printed width is as wide as possible and the correct orientation.

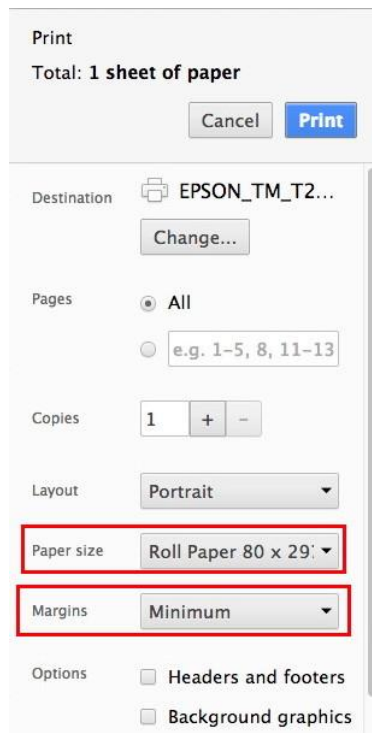

The image shows a print dialog box for an Epson printer. At the top, it says "Print" and "Total: 1 sheet of paper". There are "Cancel" and "Print" buttons. Below that, the "Destination" is set to "EPSON_TM_T2..." with a "Change..." button. The "Pages" section has "All" selected. The "Copies" section shows "1" with "+" and "-" buttons. The "Layout" is set to "Portrait". The "Paper size" is set to "Roll Paper 80 x 29'", which is highlighted with a red box. The "Margins" are set to "Minimum", also highlighted with a red box. At the bottom, there are two unchecked options: "Headers and footers" and "Background graphics".

Integrating a Cash Drawer

 
PC/Windows Setup

If you choose to add an optional Cash Drawer to the printer, you need to do some additional setup. The PC setup can be done right within the Printer Driver.


Go to Start Menu -> Devices and Printers.

Click on the Epson printer.

Select File -> Printing Preferences

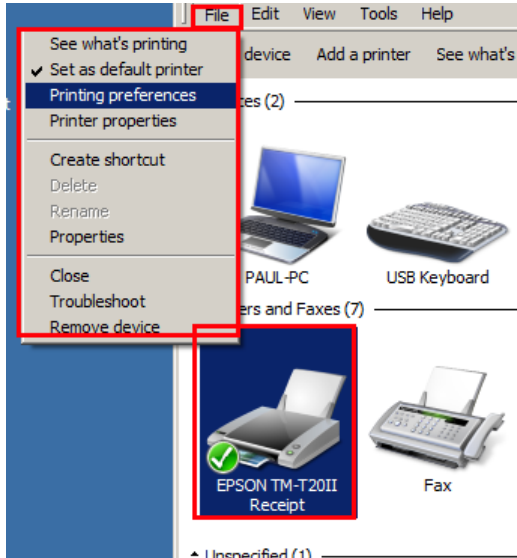


Select "Peripherals" tab

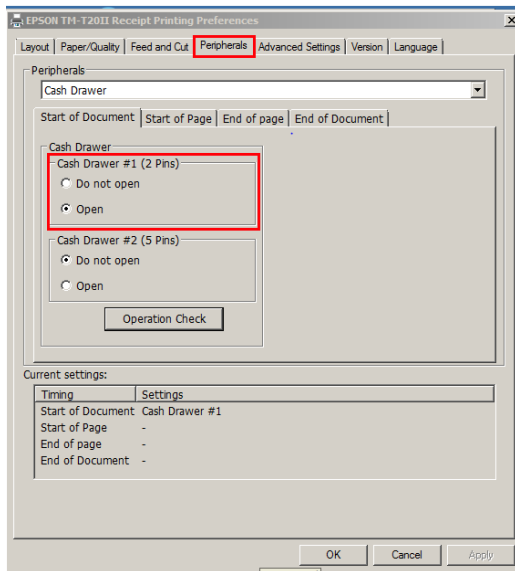 


Set the Cash Drawer #1 to "Open" and press "OK" to save the preferences. If the Cash Drawer is connected to the printer, an Operational Check will pop the drawer open.

MacOS X Setup

 
Once the print driver is set up, you can fine-tune the settings to your preference. Open the Printer Dialog box, select the “Paper Size” option from the drop-down. Ensure the “Scale to fit paper size” checkbox is selected.

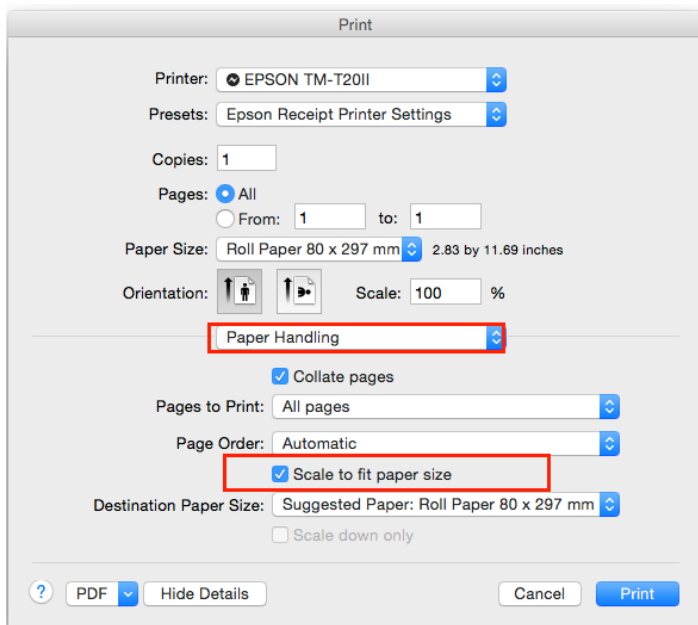

 Next, select the “Printer Settings” from the Drop-down and set the resolution and other settings. Make sure the Paper Size is correct!

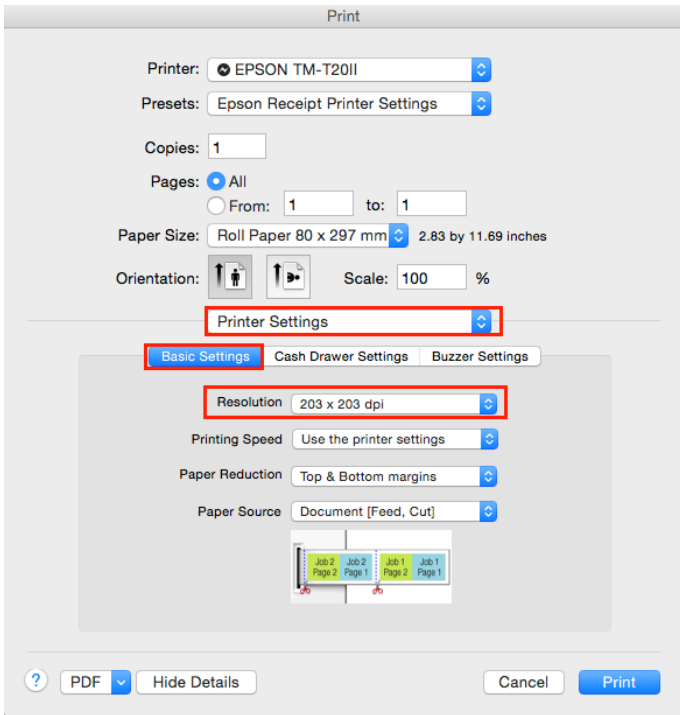

 If you are integrating a Cash Drawer, select the “Cash Drawer Settings” tab and set the “Cash Drawer #1 settings.”

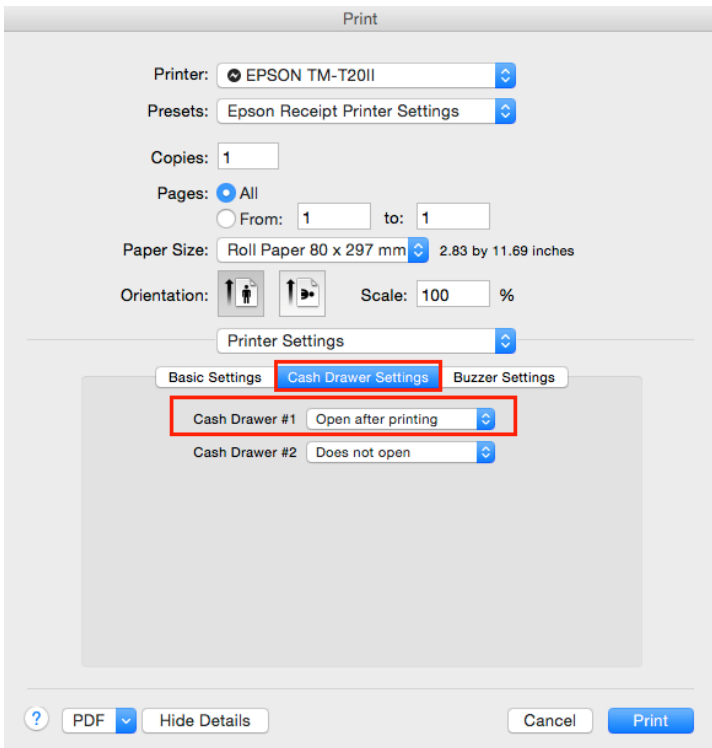

That’s it! You should be all set!